
Multifunctional 2-Channel Photodiode Amplifier

Introduction

Photodiodes generate small photo-currents ranging from microamperes down to picoamperes, which cannot be measured with commonly available multimeters – amplifiers are required. Amplifiers such as the sglux dual channel MULTIBOARD converts very small currents into a voltage of 0... 4V. Thus such amplifiers convert the small current signal of photovoltaic elements (photodiodes) to signal voltages suitable for typical voltmeters, microcontrollers and PLC systems.

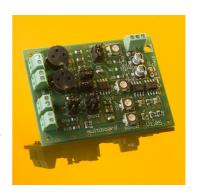

Basics

Photo-currents can be converted to voltages by transimpedance amplifiers (TIA). The MULTIBOARD utilizes this approach. The schematic is shown in Appendix C. For basic knowledge about this device please refer to application note (SBOA061) for device OPA128 from texas instruments. Other approaches employ current-to-frequency converters and integrators, such as the sglux "DIGIBOARD".

Specifications

The MULTIBOARD contains two independent amplifier channels with adjustable gain. By using jumpers one can select the amplifier type (voltage or transimpedance amplifier) and configuration (two independent amplifiers or single two-stage amplifier) as well as the gain.

The board provides current gain in the range 10^5 V/A... 10^7 V/A and voltage gain from 2... 1000 V/V in single-stage configuration. Additionally to the fixed gain factors are potentiometers for custom gain factors in the range 10^4 V/A... 10^6 V/A. By two stages one may reach gains of 10^{10} V/A respectively 10^5 V/V if offsets are carefully adjusted. The maximum usable output voltage range is ± 4 V and must be considered while calculating gain factors.

The circuit is ideally operated with a split power supply of $\pm 7 \, \text{V...} \pm 26 \, \text{V}$. For lower performance measurements a single supply of 15 V...36 V may be used. **Note**: For using single supply mode see Appendix B. **Note**: Applying operating voltage with a wrong polarity can destroy the board. The photodiodes plug directly into sockets or are externally connected via screw terminals. The output voltages are available on screw terminals.

Specifications overview

Signal out	Ranges	Setting facilities	U_{supply}
04V	400nA 4μΑ 40μΑ	3 ranges configurable with jumpers	1536V single supply or
	40nA4μA	continuously adjustable amplification with potentiometer	2 x 726V dual supply
		offset control with potentiometer	

Rev 2.2 page 1 [7]



Multifunctional 2-Channel Photodiode Amplifier


Starting

The index "x" in names relates to the channel number ("1" or "2"), for positions and pin numbers please refer to the picture on the right.

- Choose operation modes and configuration by setting jumpers MODx and STAGES; refer to Appendix A, tables 2 and 3.
- Set required gains with jumpers GAINx and/or potentiometers RGAINx; again refer to Appendix A, table 4.
- Connect voltmeter(s) to screw terminals OUTx. Right pin (#1) is the output, left pin (#2) equals to GND.
- Connect the power supply to screw terminal PWR. For dual power supply use top terminal (#3) for negative, middle (#2) for GND and bottom terminal (#1) for positive voltage. A single supply must be connected with positive pole to bottom pin (#1) and supply GND to top pin (#3), middle pin is left open.

Note: In case of single supply there is a floating virtual ground on the middle terminal to which the inputs and outputs relate and

which must not be connected to power supply GND.

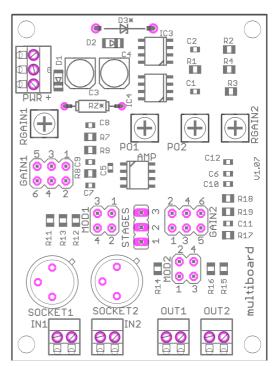

- Adjust offsets for all channels. To do this shorten inputs for voltage amplifiers and leave inputs open for transimpedance stages (or insert photodiodes and darken them to compensate dark currents as well). Now adjust the output voltages to 1mV or less by potentiometers POx.
- Connect photodiode(s) to either terminal INx or SOCKETx. The right pins (#1) of screw terminals INx are the inputs, the left pins (#2) equal to GND (cathode). If using the sockets the upper pinhole is the input and must be plugged with one photodiode pin in any case. Other pinholes are grounded and may be used as required. Polarity of the photodiodes within sockets depends only on desired output voltage polarity.

Rev 2.2 page 2 [7]



Multifunctional 2-Channel Photodiode Amplifier

Examples

Problem 1:

Compare photocurrents of two different photodiodes. This task at first requires two identical channels and an estimation of the photocurrent generated with this experiment. This current can be calculated by the formula:

$$I = A_{chip} S_{chip} E_{\lambda} 10.000$$

where I is the photocurrent in nA, A_{chip} is the chip active area of the photodiode you plan to use in mm². S_{chip} is the chip's spectral sensitivity in AW⁻¹nm⁻¹ and E_{λ} is the spectral irradiance of the UV light source in mWcm⁻²nm⁻¹. Please get A_{chip} and S_{chip} from the photodiode's datasheet. E_{λ} needs some knowledge of the UV source you plan to use. Sun and purification lamps generate approx. 1....10 mWcm⁻²nm⁻¹. For a very detailed tutorial have an internet search for: "SiC UV Photodiode Selection Guide". Further to the example experiment, the estimated photocurrent may be approx. 1....2µA. As the output of the MULTIBOARD is 0...4V, you may expect to get 1...2V output voltage by defining the gain as $1V/\mu A = 10^6 V/A$.

Solution:

- ✓ set jumper STAGES to position 1-2 (two channel mode), set MOD1 and MOD2 to position 1-2 (transimpedance amplifier)
- ✓ set GAIN1 and GAIN2 to position 2-4 (transimpedance gain 10⁶ V/A)
- ✓ connect and turn on power supply
- ✓ insert photodiodes, darken them, compensate offsets (and dark currents) by adjusting PO1 and PO2
- ✓ illuminate photodiodes with visible and ultraviolet light, compare voltages on terminals OUT1 and OUT2

Problem 2:

Convert a photocurrent of 1nA to a voltage of 2.0 Volts. This requires a total gain of $2V/nA = 2 \cdot 10^9$ V/A, which can be provided by two amplifier stages. The first stage converts the current to a voltage of 10mV with a gain 10^7 V/A, which is then boosted to 2.0 V by the second voltage amplifier stage with a gain of 200 V/V. This voltage can be displayed easily by a standard digital panel voltmeter.

Solution:

- ✓ set jumper STAGES to position 2-3 (two channel mode)
- ✓ set MOD1 to position 1-2 (transimpedance amplifier) and GAIN1 to position 1-3 giving 10⁷ V/A in the first stage
- ✓ open MOD2 (voltage amplifier, pre-gain 2) and set GAIN2 to position 1-3 (giving overall voltage amplification of 200 in stage two)
- ✓ connect and turn on power supply

Rev 2.2 page 3 [7]

Multifunctional 2-Channel Photodiode Amplifier

- ✓ insert photodiode into SOCKET1 and darken it; first compensate offset of first stage by adjusting PO1 until voltage on OUT1 is below 1 mV; then compensate offset of second stage by adjusting PO2 until voltage on OUT2 is below 1 mV
- √ illuminate photodiode and measure voltage on terminal OUT1

Appendix A

Table 1: pin, terminal and other assignments for split supply

	Pin 1	Pin 2	Pin 3	If a single supply is
PWR	+7 V +26 V	GND	-7 V26 V	applied see Appendix B.
IN1	input terminal channel 1	GND		
SOCKET1	input socket channel 1	GND	GND	
OUT1	output terminal channel 1	GND		
PO1	offset compensation channel 1			
IN2	input terminal channel 2	GND		
SOCKET2	input socket channel 2	GND	GND	
OUT2	output terminal channel 2	GND		
PO2	offset compensation channel 2			

Table 2: channel configuration

STAGES	Function
1-2	two independent amplifier channels
2-3	single two-stage amplifier; note: channel two must be configured as voltage amplifier by setting MOD2 in any position but 1-2 and offsets must be carefully adjusted

Table 3: amplifier mode

MODx	Function	
1-2	transimpedance amplifier	
1-3	voltage amplifier pre-gain -10	
3-4	voltage amplifier pre-gain -5	
Open	voltage amplifier pre-gain -2	

Table 4: gain factor setting

GAINx	transimpedance gain	voltage gain (multiply by voltage pre-gain to	
		get total voltage gain)	
	[V/A]	[V/V]	
1-3	10 ⁷	100	
2-4	10 ⁶	10	
3-5	10 ⁵	1	
4-6	adjustable by potentiometer RGAINx in range 10 ⁴ 10 ⁶	0.110	

Rev 2.2 page 4 [7]



Multifunctional 2-Channel Photodiode Amplifier

Appendix B

Table 1: pin, terminal and other assignments for single supply

	Pin 1	Pin 2	Pin 3	
PWR	+15 V +36 V	open	Supply GND	The board GND is not
IN1	input terminal channel 1	GND		referenced to the power
SOCKET1	input socket channel 1	GND	GND	supply GND
OUT1	output terminal channel 1	GND		
PO1	offset compensation channel 1			
IN2	input terminal channel 2	GND		
SOCKET2	input socket channel 2	GND	GND	
OUT2	output terminal channel 2	GND		
PO2	offset compensation channel 2			

If a single supply is used add a zener diode (D3) with at least 7,5V zener voltage. The recommended zener voltage is half the single supply input voltage.

Rev 2.2 page 5 [7]


Tel: + 86-755-83289036 Fax: + 86-755-83289052 E-mail: sales@isweek.com



MULTIBOARD (TW-MF2CAB)Multifunctional 2-Channel Photodiode Amplifier

Appendix C

Schematic:

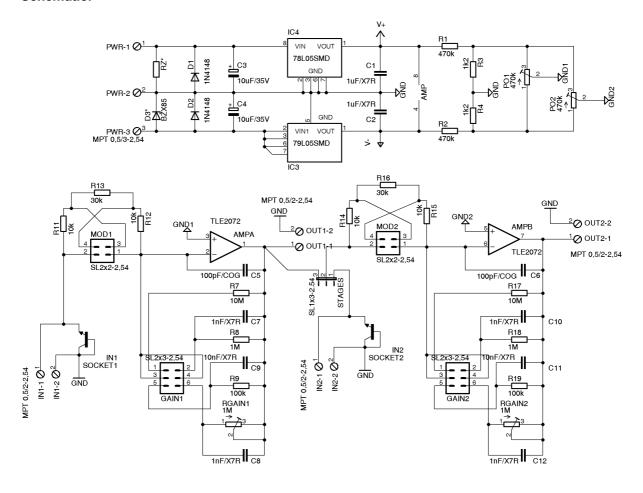

Rev 2.2 page 6 [7]

Tel: +86-755-83289036

Fax: +86-755-83289052


E-mail: sales@isweek.com



MULTIBOARD (TW-MF2CAB)Multifunctional 2-Channel Photodiode Amplifier

Appendix D

Dimensions:

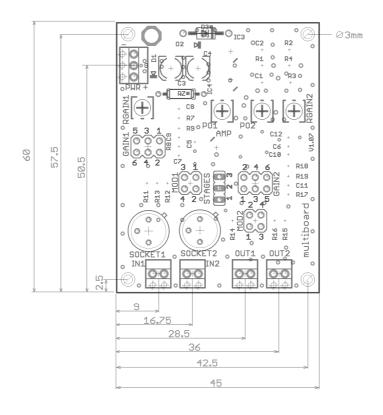

Rev 2.2 page 7 [7]

Tel: + 86-755-83289036

Fax: +86-755-83289052

E-mail: sales@isweek.com