Sweek.com

## DIN RAIL / PANEL MOUNT



150 to 300 VAC 1 to 25 AAC Input Range



Two Element - .26" Window 150 to 300 VAC 1 to 25 AAC Input Range



Three Element - .26" Window 150 to 300 VAC 1 to 25 AAC Input Range

# Data Stream RS485 Digital Transducer

The **CRD5100** Series Data Stream Digital Transducers are designed for complete monitoring of electrical power systems. The digital technology is used to measure voltage, current, power frequency and energy in single and three phase designs. The data is streamed over an RS485 IEEE bus which enables multiple transducers to communicate thru a single master connection. These advanced sensors are ideal for entire plant or zone monitoring. Also, the communication alagorithm can be pre-ordered with ASCII based control or modified MODBUS based control.

## Sensing

Voltage, True RMS Current, True RMS Active Power, bi-directional Active Energy, bi-directional Reactive Power, bi-directional Reactive Energy, bi-directional Power Factor Frequency

## **Applications**

Sub-Metering Motor Loads Uninterruptible Power Systems Remote Monitoring Load Shedding **Energy Management** 

### Features

35mm DIN Rail or Panel Mount 24 VDC powered Use with external current transformers Highest precision available Connection diagram printed on case

## **Regulatory Agencies**



## **PART NUMBERS**

CRD5110	-	<ul> <li>1 Element, AC Multifunction RS485 Digital Transducer</li> </ul>							
CRD5150	-		-		3 Phase, 3	3 Phase, 3-Wire AC Multifunction RS485 Digital Transducer			
CRD5170	-		-		3 Phase, 4-Wire AC Multifunction RS485 Digital Transducer				
	<b>150</b> <b>300</b> Available	• • • •	VAC	VAC	5 - 15 - 25 -	0-1 AAC 0-5 AAC 0-15 AAC 0-25 AAC	Note: Add an the end for M CRD5110-150	ODBU	

Data Stream

B

Sweek www.isweek.com

Add: 16/F, Bldg. #3, Zhongke Mansion, No.1 Hi-Tech S. Rd, Hi-Tech Park South, Shenzhen, Guangdong, 518067 P.R.China Tel: + 86-755-83289036

Fax: + 86-755-83289052


E-mail: sales@isweek.com

# **RS485 Digital Transducer**


Basic Accuracy:	0.5%	Torque Specifications:	(0.4Nm)
Calibration:	True RMS Sensing	Response Time:	)-90% FS
Thermal Drift:	500 PPM/°C	Relative Humidity:80% for temperatu	ires up to
Operating Temperature <sub>1</sub> :	0°C to +60°C	31°C and decreasing linearly to 50%	% at 40°C
Installation Category:	CAT II	Output Resolution:	16 bit
Vibration Tested To:	IEC 60068-2-6,1995	Transducer fanout on common bus:	64 max.
Pollution Degree:	2	Baud Rate <sub>3</sub> :1200, 2400, 4800, 9600,1	19.2K .bps
Insulation Voltage:	2500 VDC	A/D Conversion Type:4th order De	lta Sigma
Altitude:	2000 meter max	Device Address <sub>3</sub> :	00 to FF
Frequency Range:	20 Hz - 5 KHz	Data Format:	ASCII
MTBF:	Greater than 100K hours	Supply Current:Typical 30mA	lax 30mA
Cleaning:	Water-dampened cloth	Weight:	0.5 lbs.
Supply Voltage <sub>2</sub> :	24 VDC ±10%		
1) RH 5% to 95%, non-condensing	2) 0.4% max. ripple Vpp		

**SPECIFICATIONS** 

3) Factory default settings: address 01, baud rate 9600, no parity, no flow control, 1 stop bit

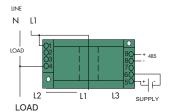


#### CRD5110 Single Element, 2-Wire

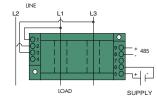


CRD5150 Dual Element, 3-Wire


# **Connection Diagram**

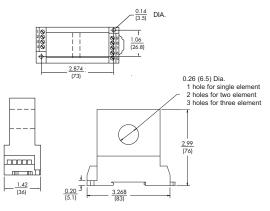

## **OUTLINE DRAWING**

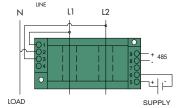

CRD5150 Dual Element, 3-Wire

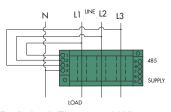

CRD5170 3 Element, 4-Wire CRD485-232 RS485 to RS232 Converter Accessory ТΧ Connect PC to RS485 Bus RX 01 02 03 04 DATA STREAM TRANSDUCER сом CRD485-232 +5VD RS232 0 GND + DB 9, FEMALE SUPPLY

# **ASCII Simplified Programming Commands**

A simplified data structure is used with only 6 commands required for full control of the transducer. Commands are : Read Transducer Name, Read Configuration, Set Configuration, Read Measurements, Read Energy Totalizer and Clear Energy Totalizer. For illustration, the following commands are used to read data from a CRD5170 3 Phase, 4 Wire Transducer with a device address of 00. Command Transducer to Read Data: #00A<cr>

 $\label{eq:transducers} \begin{array}{l} \mbox{Response:} >+[\% \mbox{ FS Voltage}_{1-N}]+[\% \mbox{ FS Current}_1]+[\% \mbox{ FS Voltage}_{2-N}]+[\% \mbox{ FS Current}_2]+[\% \mbox{ FS Voltage}_{3-N}]+[\% \mbox{ FS Current}_{2,3}][+/- \mbox{ \% FS Voltage}_{3-N}]+[\% \mbox{ FS Current}_{3-N}]+[\% \mbox{ FS Current}_{3-N}]+[$ 

Power][+/-% FS VARS][+/-Power Factor][Frequency]<cr>

Command Transducer to Read Energy Totalizer: #00W<cr>

Transducer Responds: 01[+/-KWHr]{\[+/-KVHr][check sum]<cr>
Note: This is for illustration purposes only, See Applications Guides (Section I for complete instructions.

#### Sweek www.isweek.com

Add: 16/F, Bldg. #3, Zhongke Mansion, No.1 Hi-Tech S. Rd, Hi-Tech Park South, Shenzhen, Guangdong, 518067 P.R.China

Tel: + 86-755-83289036 Fax: + 86-755-83289052

E-mail: sales@isweek.com

# **Data Stream**